Sport Sii

HARDWARE USER'S GUIDE

MODE：VX-001

THANK YOU

Thanks for purchasing your Sport Vii, join Sport Vii for achieve the purpose of entertainment and body-training through the body movement and pleasure!

Before using this product, please read the following contents carefully for safe and ensure proper use. After you finished reading this guide, keep it in a safe place for future reference.

There are 12 games in the unit, the screens are beautiful and the sounds are living, the different feelings, handle is simply, graphics are fresh, contents are richness, sport and body are combined perfectly.

You also can insert ROM cartridge to play the different kinds of games.

THE STRUCTURE AND COMPONENTS OF THE CONTROLLER:

- RF wireless function combines the body and TV screen. CPU apperceive the information and feedback to JOYPAD. Different sounds and joy pad has vibration function;
- 3 axes G-SENSOR to feel the track and the force of the sport;
- RF 2.4G Wireless transmitter/receiver, assign the frequency automatically, avoid 2.4G RF disturb one another;
- RF transfers real time, transfer the data of the MEMORY library, by the deal with of the MCU, the graphics and sounds are not delayed;
- The wireless joy pad can control the screen of the TV, it can product the vibration and 10 different sounds;
- 2*AA alkaline batteries can work more than 30 hours continuous, the joy pad has SLEEP function.

PRODUCT DESCRIPTION

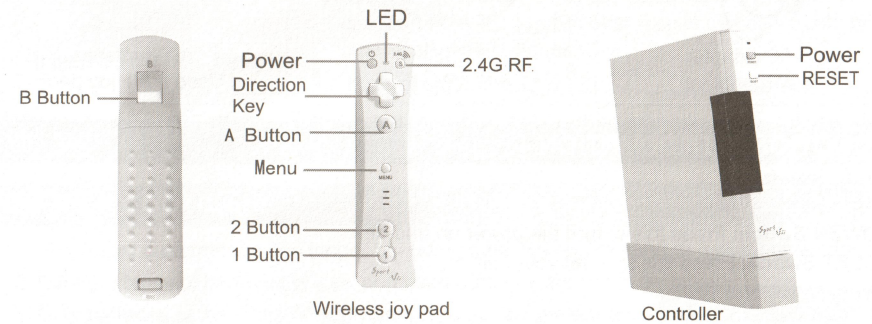

1 Button is A Button, 2 Button is B Button.

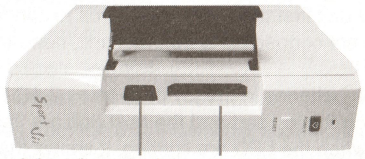

Remark: If don't plug the cartridge into the slot or plug in it wrong, there is no screen displays on the TV or display abnormality, please plug in the cartridge again.

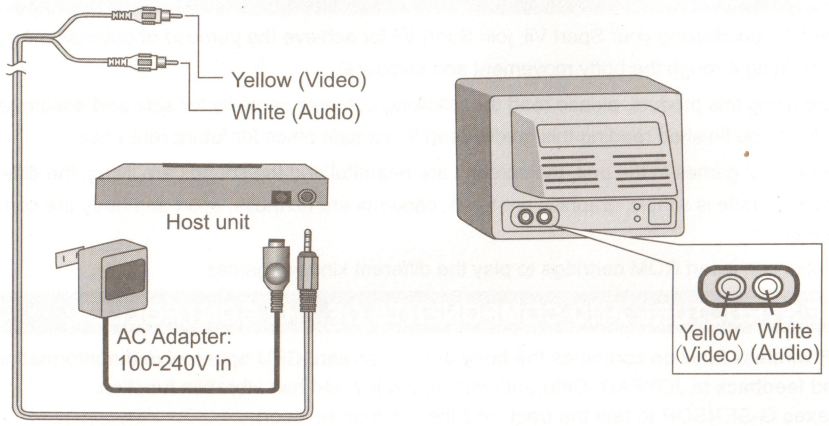

A/V cable connect to TV set

Remark:

1. Before connect to the TV set, please confirm your TV and unit are power off.
2. Please switch the TV to Audio/Video mode.

FITTINGS:

AC Adapter
Appropriative

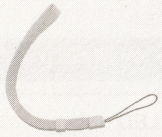

Chain
Used on the joy pad



"AA" batteries
Used n the joy pad

FUNCTION INTRODUCTION

Host unit

POWER Switch: Press this to turn the power on and off.
RESET Switch: Press this to reset your unit.

Wireless joy pad

Power switch: Power on the joy pad, or awaken the joy pad when it enters the sleep mode.
2.4G RF: 2 Functions
Force to connect: When use the unit first time, you must force to connect, or during using it, when the joy pad is not connected to the host unit, need to force the joy pad to connect the host unit.
Connect method: After install the batteries in the joy pad, press 2.4G RF key, then open the host unit, the LED on the joy pad and the host unit are flashing, please wait for about 3-4 seconds, when the LED are lighting, it shows they are connected.
Force to cut: When the joy pad and the host unit are connected press this key, then the joy pad and the host unit are off, the LED are flash. If the joy pad is not to connect to another unit, after 15 seconds they are connect automatically. So don't press this key during play the game.

Note:

When more than 2 units are open at the same time, if the other joy pad is pressed the 2.4G RF key, then the joy pad will connect to this unit. The primary joy pad can not work, you need to force them to connect again.

Menu: Press this to shows the menu to choose continue or exit the game.

Holding method:

The following figure shows a recommended method of holding the joy pad.

1. Tie the wrist strap attached to your wrist.
2. Adjust the position of the adjuster on the wrist strap to the correct position.

WIRELESS JOY PAD CHARACTERISTIC

When the joy pad connects to the host unit, if don not press any key, after 10 minutes the joy pad will enter the Sleep mode. The Sleep mode is save electricity mode, the LED on the joy pad will power off. When press the Power key can awake the joy pad, the LED will be lighting.

Batteries Information

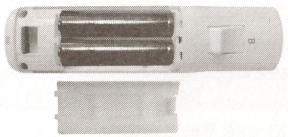

Requires 1.5V "AA" batteries

1. Make sure the joy pad is turned OFF.
2. Remove cover on bottom of unit.
3. Remove exhausted batteries and dispose of them properly.
4. Replace with new batteries. Be sure the positive (+) and negative (-) ends of the batteries are facing the correct direction (see image). For best results use only fresh, high quality, alkaline batteries.
5. Replace battery cover.

Note: Be sure the batteries are fresh or the unit will not function properly, when not use Sport Vii for a long time, please take out the batteries out of the joy pad.

BATTERY NOTICE

1. For better performance and longer operating time, we recommend to use alkaline batteries.
2. Different types of batteries or new and used batteries are not to be mixed.
3. Only batteries of the same or equivalent type as recommended are to be used.
4. Do not attempt to recharge non-rechargeable batteries.
5. Do not use mercury oxide batteries.
6. Remove exhausted battery to avoid leakage.
7. Do not short circuit battery contacts.
8. Do not dispose of batteries in fire.
9. Remove the batteries from the unit if it will not be used for an extended period of time.
10. Rechargeable batteries are to be removed from the toy before charged.
11. Rechargeable batteries are only to be charged under adult supervision

NOTE: Manufacturer assumes no liability whatsoever caused by leaking or corroding batteries.

USING THE ADAPTER AND A/V CABLE NOTE

- Use only the Power Adapter included in the package.
- Do not use power adapter made by other manufactures for other electrical devices and appliances.
- Do not use the AC Power Adapter on other electrical devices and appliances.
- Make sure the Power Adapter is securely plugged into an AC outlet and the Power In on the rear panel of the PORT.
- Do not spill liquids and water on the Adapter and store the Adapter away from the humid place.
- Do not touch the Adapter and A/V cable with the wet hands.
- Do not step on, sharply pull or bend any wires and cables.
- Do not use the rupture Adapter and A/V cable.
- Do not expose the Adapter and A/V cable to extreme heat objects.
- Please let the children and animals away from the Adapter and A/V cable.
- Make sure the Power Adaptor is securely plugged into an AC outlet and the Power In on the rear panel of the PORT.
- Hold plugs straight when inserting them into a socket.

INSERT THE CARTRIDGE

1. The cartridge is designed to connect the cartridge to the slot on the PORT.
2. Please insert the cartridge before power on the unit.
3. Place the cartridge on the PORT at the correct location and orientation.
4. If the unit can not display the screen normal, please try 2 to 3 times to insert the cartridge.
5. Before pull out the cartridge please power off.

FOLLOW THE PRECAUTIONS BELOW WHENEVER USING YOUR SPORT Vii:

- Use only Power Adapter included in the package, not to use the battery.
- When pull out the cable from the unit, please first power off the unit and store the cable in a proper place.
- Do not expose the Sport Vii to extreme heat or cold.
- Do not disassemble or try to repair Sport Vii or any of its components.
- Do not store your Sport Vii in a humid place, on the floor or in any location where it may collect dirt, dust, and lint. Etc. It's beneficial to maintain.
- Do not drop, hit or otherwise abuse Sport Vii or its components.
- Make sure all connections to the Sport Vii are made carefully and inserted into the correct locations only.
- Do not spill liquids on your Sport Vii or its components.
- To clean your Sport Vii with a soft slightly damp cloth. Always allow all the components to dry completely before using again.
- Do not play if you are tired or need sleep.
- Be sure to take a 10 to 15 minutes break at least every hour while playing.
- Keeps the kids away from cable or connecting wire, or it may circle around their neck and cause the accident once the kids overexert the wires and make the unit drop down to floor.

TROUBLESHOOTING

PROBLEM	SOLUTION
Power is not turned on. (Power Indicator light is not on.)	• Make sure the Power Adaptor is securely plugged into an AC outlet and the Power In on the rear panel of the PORT. • Make sure the host unit turns on?
No picture on TV screen	• Does the Sport Vii turn on? • Check the cartridge is inserted properly into the cartridge slot on the PORT? • Before pull out the cartridge turn off the unit first. • Adjust the brightness and contrast of the TV. • Check that the A/V cable is connected securely to the appropriate jacks of the PORT and TV.
No game sound	• Check that the A/V cable is connected securely to the appropriated jacks of the PORT and TV. • Check the TV volume is turned off or muted.
Picture on TV screen is unsteady	• Power off the Sport Vii and try again. • Check the A/V cable is connected to the appropriate jacks of the PORT and TV. • Remove the cartridge from the PORT, then insert it again.
Joy pad can't work normal.	• Remove the cartridge from the PORT, then insert it again. • Is the battery's capacity in the joy pad too low? • Check the joy pad is connected to the host unit right. • Press 2.4G RF again, waiting for 3-4 seconds until to the LED light on.
Keys do not function.	• Have batteries in the joy pad been installed correctly? • Is the battery capacity in the joy pad too low?
Any question is not still clear please read this user's guide.	

Information contained in this leaflet is subject to change without prior notice.